




HUNTER Xci POLYISOCYANURATE USED AS AN AIR BARRIER INSTALLATION GUIDELINES

HUNTER
CONTINUOUS INSULATION

XCI AB3B

16" or 24" Polyiso Insulation with Brick-Ties

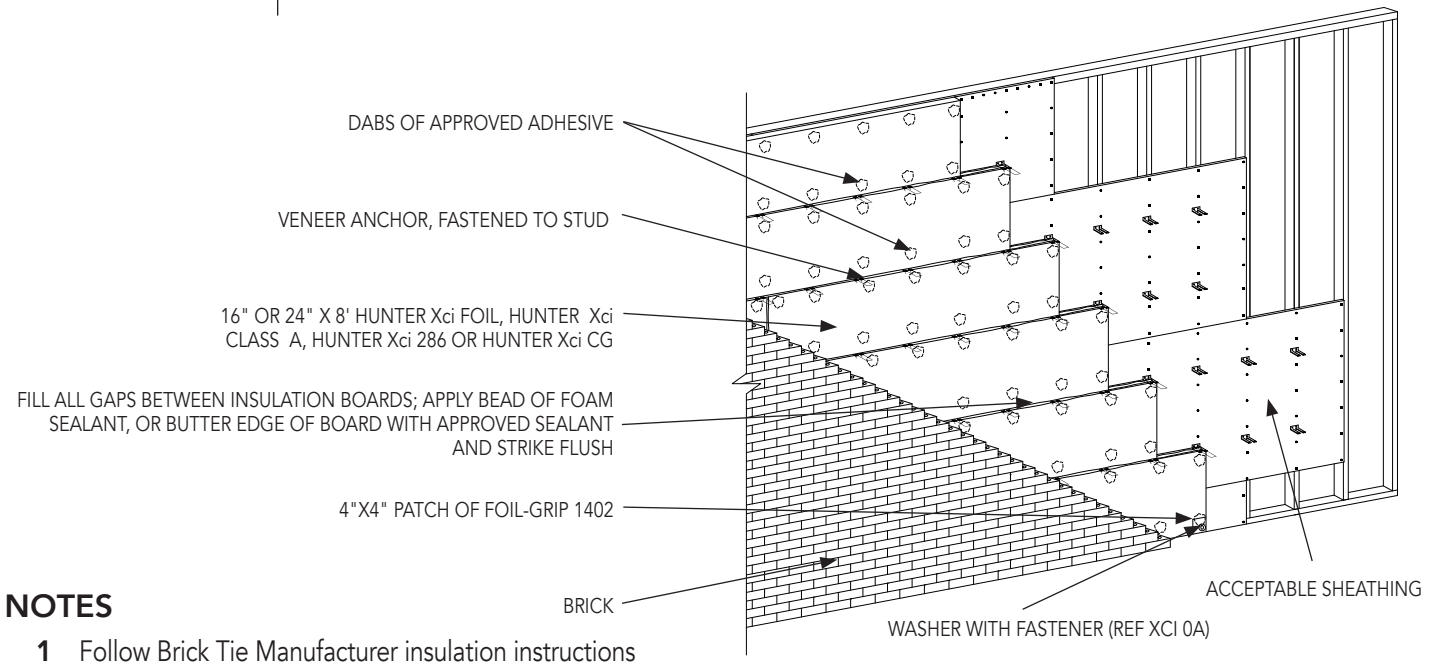


NOTES

- 1 Follow Brick Tie Manufacturer insulation instructions

16" or 24" Polyiso Insulation with Brick-Ties

XCI AB3C

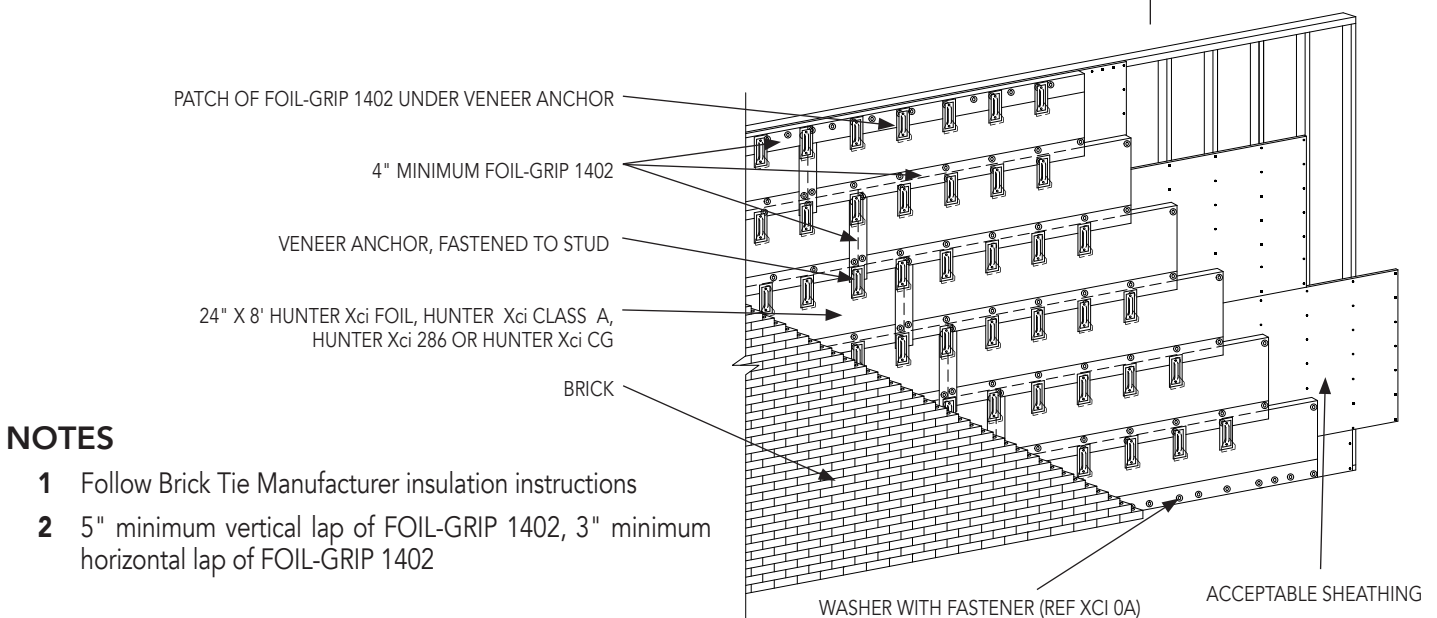

NOTES

- 1 Follow Brick Tie Manufacturer insulation instructions
- 2 5" minimum vertical lap of FOIL-GRIP 1402, 3" minimum horizontal lap of FOIL-GRIP 1402